# TOSHIBA

# DICOM CONFORMANCE STATEMENT PRINT SCU FOR TOSHIBA WHOLE-BODY X-RAY CT SCANNER A-SERIES MODEL (COT-31A)

#### **TOSHIBA CORPORATION**

© TOSHIBA CORPORATION 1998 ALL RIGHTS RESERVED

\*

# **IMPORTANT!**

- 1. No part of this manual may be copied or reprinted, in whole or in part, without written permission.
- 2. The contents of this manual are subject to change without prior notice and without our legal obligation.

# **Table of Contents**

<b><u>1 INTRODUCTION</u></b>	. 1
4.4. Dependence	4
1.1 REFERENCES	
1.2 DEFINITIONS	
<b>1.3 ACRONYMS, ABBREVIATIONS AND SYMBOLS</b>	. 2
2 IMPLEMENTATION MODEL	<u>. 3</u>
2.1 APPLICATION DATA FLOW DIAGRAM	9
2.2 FUNCTIONAL DEFINITIONS OF AE'S	
2.2.1 EXPORT AE	
2.3 SEQUENCING OF REAL WORLD ACTIVITIES	
2.3.1 FEATURES	
2.3.2 OPERATION	4
3 AE SPECIFICATIONS	. 5
3.1 EXPORT SPECIFICATION	. 5
3.1.1 EXPORT ASSOCIATION ESTABLISHMENT POLICIES	5
3.1.2 EXPORT ASSOCIATION INITIATION BY REAL-WORLD ACTIVITY	
3.1.3 EXPORT ASSOCIATION ACCEPTANCE POLICY	
4 COMMUNICATION PROFILES	. 8
4.1 SUPPORTED COMMUNICATION STACKS	. 8
4.2 OSI STACK	
4.3 TCP/IP STACK	
4.3.1 API	
4.3.2 PHYSICAL MEDIA SUPPORT	
4.4 POINT-TO-POINT STACK	
<b>1.4 I</b> UNI-10-1 UNI STACK	. 0
5 EXTENSIONS/SPECIALIZATIONS/PRIVATIZATIONS	<u>. 9</u>
<u>6 CONFIGURATION</u>	<u>10</u>
6.1 AE TITLE/PRESENTATION ADDRESS MAPPING	10
6.2 CONFIGURABLE PARAMETERS	10
6.2.1 TIME-OUT VALUE, RETRY COUNT, RETRY INTERVAL	10
6.2.2 WARNING STATUS CRITERIA	12
6.3 IMPLEMENTATION INFORMATION AND MAXIMUM RECEPTION PDU SIZE	
6.4 DEFAULT TRANSFER SYNTAX	

\*

7 SUPPORT OF EXTENDED CHARACTER SETS14
--

8.1 DIMSE-Services		5
8.2 BASIC FILM SESSION SOP C	LASS 1	6
8.2.1 N-CREATE ATTRIBUTES		16
8.3 BASIC FILM BOX SOP CLASS	s 1	7
8.3.1 N-CREATE ATTRIBUTES		17
8.4 BASIC GRAYSCALE IMAGE B	OX SOP CLASS 1	7
8.4.1 N-SET ATTRIBUTES		18
8.5 PRINTER SOP CLASS		9
8.5.1 N-GET ATTRIBUTES		19

### **1** Introduction

This document is a DICOM Conformance Statement for Toshiba CT scanner A-series. It is intended to provide the reader with the knowledge of how to integrate this product within a DICOM compliant hospital network. It details the DICOM Service Classes, Information Objects, and Communication Protocols which are supported by this product.

If the reader is unfamiliar with DICOM, it is recommended that they read the DICOM Specification (referenced below) prior to reading this conformance statement. Also note that this document is formatted according to the DICOM Specification, Part 2: Conformance.

#### **1.1 References**

• ACR-NEMA Digital Imaging and Communications in Medicine, DICOM V3.0.

#### **1.2 Definitions**


- **Association Establishment** An Association Establishment is the first phase of communication between two DICOM Application Entities. The AEs use the Association Establishment to negotiate how data will be encoded and the type of data to be exchanged.
- **Called Application Entity Title** The Called AE Title defines the intended receiver of an Association.
- **Calling Application Entity Title** The Calling AE Title defines the requestor of an Association.
- **DICOM Message Service Element (DIMSE)** A DIMSE defines the services and protocols utilized by an Application Entity to exchange messages.
- **Information Object Definition (IOD)** An IOD is a data model which is an abstraction of realworld information. This data model defines the nature and attributes relevant to the class of realworld objects represented.
- Service Class Provider (SCP) A Service Class Provider plays the "server" role to perform operations and invoke notifications during an Association. An example of a Storage Service Class Provider would be an image storage device. In this case, the image storage device is storing the image that was sent by a Service Class User.
- Service Class User (SCU) A Service Class User plays the "client" role to invoke operations and perform notifications during an Association. An example of a Storage Service Class User would be an image acquisition device. In this case, the image acquisition device will create and send a DICOM image by requesting that a Service Class Provider store that image.
- **Service/Object Pair (SOP) Class** A SOP Class is defined by the union of an Information Object Definition and a set of DIMSE Services. A DICOM Application Entity may support one or more SOP Classes. Each SOP Class is uniquely identified by a SOP Class UID.
- **SOP Instance** A specific occurrence of a Information Object.
- **Transfer Syntax** The Transfer Syntax is a set of encoding rules that allow DICOM Application Entities to negotiate the encoding techniques (e.g. data element structure, byte ordering, compression) they are able to support. The Transfer Syntax is negotiated during Association Negotiation.
- **Unique Identifier (UID)** A Unique Identifier is a globally unique, ISO compliant, ASCII-numeric string. It guarantees uniqueness across multiple countries, sites, vendors and equipment.

#### 1.3 Acronyms, Abbreviations and Symbols

- ACC American College of Cardiology
- ACR American College of Radiology
- ASCII American Standard Code for Information Interchange
- AE Application Entity
- ANSI American National Standards Institute
- CEN TC251 Comite Europeen de Normalization Technical Committee 251 Medical Informatics
- DICOM Digital Imaging and Communications in Medicine
- DIMSE DICOM Message Service Element
- DIMSE-C DICOM Message Service Element Composite
- DIMSE-N DICOM Message Service Element Normalized
- HIS Hospital Information System
- HL7 Health Level 7
- IE Information Entity
- IOD Information Object Definition
- ISO International Standards Organization
- JIRA Japan Industries Association of Radiological Systems
- NEMA National Electrical Manufacturers Association
- OSI Open Systems Interconnection
- PDU Protocol Data Unit
- RIS Radiology Information System
- SCP Service Class Provider
- SCU Service Class User
- SOP Service-Object Pair
- TCP/IP Transmission Control Protocol/Internet Protocol
- UID Unique Identifier

# 2 Implementation Model

#### 2.1 Application Data Flow Diagram

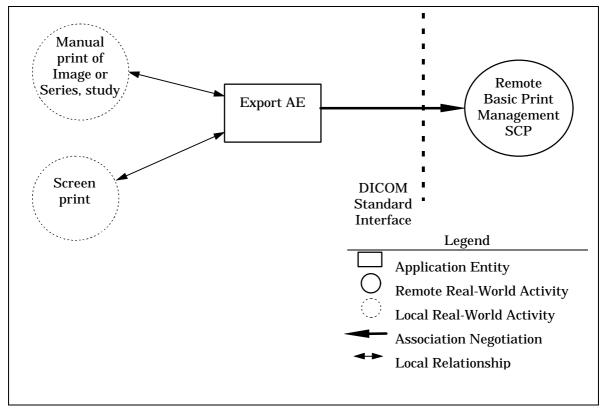

**Figure 1** 

#### 2.2 Functional Definitions of AE's

#### 2.2.1 Export AE

Export AE is used to transmit request for print images to a remote DICOM device. It therefore performs the following tasks:

- Builds DICOM Basic Grayscale Print Objects
- Establishes DICOM Association with remote DICOM device
- Performs transmit of DICOM Basic Grayscale Print Objects to remote DICOM device

#### 2.3 Sequencing of Real World Activities

### 2.3.1 Features

#### 2.3.1.1 Screen Print

• Operator requests to send images displayed on monitor.

#### 2.3.1.2 Manual Print of Image, Series or Study

- Operator requests to send images after selecting the transferred images from the Study List, the Series List or the Image List.
- When the image transfer fails, an error message window is displayed. The window has Cancel-Button and Retry-Button. If Retry-Button is clicked, the A-series CT Scanner attempts to resend the image.

#### 2.3.2 Operation

#### 2.3.2.1 Screen Print

The operation for screen print request:

Step-1: Display image on monitor.

Step-2: Press the key of screen-print and key of film-reset.

#### 2.3.2.2 Manual Print of Image, Series or Study

The operation for transmitting image manually: Step-1: Select the images, the series, or the study to be transferred. Step-2: Set up the parameters for printing images.

### **3 AE Specifications**

#### 3.1 Export Specification

Export AE provides Standard Conformance to the following DICOM SOP Classes as an SCU:

Table 1

SOP Class Name	SOP Class UID	
Basic Grayscale Print Management	1.2.840.10008.5.1.1.9	

The SOP Classes listed in **Table 2** indicate the SOP Classes regulated by the Basic Grayscale Print Management Meta SOP Class.

Table 2

SOP Class Name	SOP Class UID
Basic Film Session SOP Class	1.2.840.10008.5.1.1.1
Basic film Box SOP Class	1.2.840.10008.5.1.1.2
Basic Grayscale Image Box SOP Class	1.2.840.10008.5.1.1.4
Printer SOP Class	1.2.840.10008.5.1.1.16

#### 3.1.1 Export Association Establishment Policies

#### 3.1.1.1 Export General

Export AE will utilize and understand the following Application Context Name:

	Table 3
DICOM V3.0 Application Context	1.2.840.10008.3.1.1.1

Export AE supports a minimum PDU size of 16 Kbytes and a maximum PDU size of 16 Kbytes. The default value is set to 16 Kbytes.

#### 3.1.1.2 Export Number of Associations

Export AE can only establish one association at a time, independent of the number of destinations chosen.

#### 3.1.1.3 Export Asynchronous Nature

Export AE allows a single outstanding operation on any association. Therefore, Export AE does not support asynchronous operations window negotiation, other than the default as specified by the DICOM specification.

### 3.1.1.4 Export Implementation Identifying Information

Export AE will specify the following Implementation Identifying Information:

• Implementation Class UID

1.2.392.200036.9116.2.2.2.100 TM\_CT\_CMW\_V2.00

• Implementation Version Name

#### 3.1.2 Export Association Initiation by Real-World Activity

Export AE initiates an association when the following activity is chosen by the operator:

- "Manual print of image, series or study"
- "Screen print"
  - ----- Print Request print image to a remote DICOM device.

#### 3.1.2.1 Export Real-World Activity - Print

#### 3.1.2.1.1 Export Associated Real-World Activity - Print

Export AE performs request print images automatically or manually to destination device.

#### 3.1.2.1.2 Export Proposed Presentation Contexts - Print

Export AE proposes the following Presentation Contexts shown below:

Presentation Context Table						
Abstract Syntax		Tran		Extended		
Name	UID	Name List	UID List	Role	Negotiatio n	
Basic Grayscale Print Management	1.2.840.10008.5.1.1.9	Implicit VR Little Endian	1.2.840.10008.1.2	SCU	None	
Basic Grayscale Print Management	1.2.840.10008.5.1.1.9	Explicit VR Big Endian	1.2.840.10008.1.2.2	SCU	None	

# Table 4

#### 3.1.2.1.3 Export SOP Specific Conformance - Print

Export AE operation involves the following sequence of steps for each image transfer.

- (1) Association establishment (requestor only)
- (2) Request print images (SCU only)
- (3) Association release (requestor only)

Export AE judges that the request printing images succeeded when the result of (2) "Request printing images" is "Success" even if the result of (3) "Association release" is "Failure".

SOP Specific Conformance Statement is described in 8 DIMSE-Service and Attributes.

See chapter 8 DIMSE-Service and Attributes.

#### 3.1.3 Export Association Acceptance Policy

Export AE does not accept any associations generated by remote applications.

# **4** Communication Profiles

#### 4.1 Supported Communication Stacks

This product provides DICOM TCP/IP Network Communication Support as defined in Part 8 of the DICOM Standard.

#### 4.2 OSI Stack

Not applicable to this product.

#### 4.3 TCP/IP Stack

This product inherits its TCP/IP stack from the computer system upon which it executes.

#### 4.3.1 API

Not applicable to this product.

#### 4.3.2 Physical Media Support

This product is indifferent to the physical medium over which TCP/IP executes; it inherits the medium from the computer system upon which it executes.

#### 4.4 Point-to-Point Stack

Not applicable to this product.

# 5 Extensions/Specializations/Privatizations

Not applicable to this product.

### 6 Configuration

For A-series, the configuration can be set through interaction.

Note: Settings and changes are performed by Toshiba Service Personnel at a time of installation of the A-series.

#### 6.1 AE Title/Presentation Address Mapping


Mapping from the AE titles to the presentation addresses is as follows:

- One port number and one AE title can be described for one host name.
- Each AE title is mapped to one port number.

#### 6.2 Configurable Parameters

#### 6.2.1 Time-out Value, Retry Count, Retry Interval

The time-out value, retry count, and retry interval in each status are shown below.

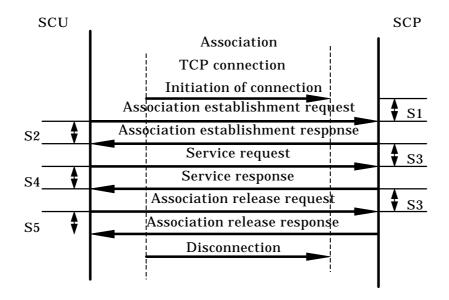

**Figure 2** 

				_	
Status	Item	Time-out Value	Retry Count	Retry Interval	Remarks
S1	Association establishment request waiting time	Not set	Not set	Not set	Not applicable to this product
S2	Association establishment response waiting time	default: 30 seconds range: 1 to 999999	default: once range: 0 to 999999	default: 5 seconds range: 0 to 999999	Only one parameter can be set in A-series
S3	Service request waiting time - Basic Film Session SOP Class - Basic Film Box SOP Class - Basic Grayscale Image Box SOP Class	Not set	Not set	Not set	Not applicable to this product
S4	Service response waiting time - Basic Film Session SOP Class - Basic Film Box SOP Class - Basic Grayscale Image Box SOP Class - Printer SOP Class	default: 180 seconds range: 1 to 999999	Not set	Not set	Only one parameter can be set in A-series
S5	Association release waiting time	default: 5 seconds range: 1 to 999999	Not set	Not set	Only one parameter can be set in A-series

Table 5

#### 6.2.2 Warning Status Criteria

The warning status criteria can be set for each station and each service.

If SUCCESS is set, the A-series judges that the request printing images succeeded.

If FAIL is set, the A-series judges that the request printing images failed.

#### 6.2.2.1 Basic Film Session SOP Class

#### 6.2.2.1.1 N-CREATE response

Warning response item	Default	Parameter setting range
Memory allocation not supported	FAIL	SUCCESS or FAIL

#### 6.2.2.2 Basic Film Box SOP Class

#### 6.2.2.2.1 N-ACTION response

#### Table 7

Warning response item	Default	Parameter setting range
Film Box SOP Instance hierarchy does not contain Image Box SOP Instance(empty page)	FAIL	SUCCESS or FAIL

#### 6.2.2.3 Printer SOP Class

#### 6.2.2.3.1 N-GET response

Table 8

Warning response item	Default	Parameter setting range
One or more Attribute Value were not read because the specified Attribute was not recognized. The Attribute Value that could be read are returned.	FAIL	SUCCESS or FAIL

#### 6.3 Implementation Information and Maximum Reception PDU Size

The default value for A-series are used for the Implementation Class UID, the Implementation Version name, and the Maximum length received.

Parameter	Default
Implementation Class UID	1.2.392.200036.9116.2.2.2.100
Implementation Version name	TM_CT_CMW_V2.00
Maximum length received(unit:byte)	16 Kbytes

#### Table 9

## 6.4 Default Transfer Syntax

In request print images, when two transfer syntax response are received, the A-series performs the transfer using the following setting.

Default = "Explicit VR Big Endian"

# 7 Support of Extended Character Sets

This product supports the following character sets:

• ISO-IR 6 (default) Basic G0 Set

# 8 DIMSE-Service and Attributes

The attribute listed in the following tables represent a small set of the possible attributes which could be supported by each services.

### 8.1 DIMSE-Services

SOP Class	DIMSE-Service	Reference	Usage SCU/SCP *1	Usage
Basic Film Session SOP Class	N-CREATE	8.2.1	M/M	Used
Basic Film Box SOP Class	N-CREATE	8.3.1	M/M	Used
Basic Film Box SOP Class	N-ACTION	-	M/M	Used
Basic Film Box SOP Class	N-DELETE	-	U/M	Used
Basic Grayscale Image Box SOP Class	N-SET	8.4.1	M/M	Used
Printer SOP Class	N-GET	8.5.1	U/M	Used

Table 10

\*1 : M=Mandatory, U=User Option

# 8.2 Basic Film Session SOP Class

### 8.2.1 N-CREATE Attributes

#### Table 11

Attribute name	Tag	Usage SCU/SCP	Attributes
Number of Copies	(2000, 0010)	U/M	Always set. (1 to 99)
Print Priority	(2000, 0020)	U/M	Always set. ("MED")
Medium Type	(2000, 0030)	U/M	Always set.
			("CLEAR FILM", "BLUE FILM", "PAPER")
Film Destination	(2000, 0040)	U/M	Always set.
			("MAGAZINE", "PROCESSOR")

# 8.3 Basic Film Box SOP Class

### 8.3.1 N-CREATE Attributes

Table 12			
Attribute name	Tag	Usage SCU/SCP	Attributes
Image Display Format	(2010, 0010)	M/M	Always set. ("STANDARD\C,R", "ROW\ R1,R2", "ROW\ R1,R2,R3", "ROW\ R1,R2,R3,R4", "COL\ C1,C2")
Film Orientation	(2010,0040)	U/M	Always set. ("PORTRAIT", "LANDSCAPE")
Film Size ID	(2010,0050)	U/M	Always set.
			("8INX10IN", "10INX12IN", "10INX14IN", "11INX14IN", "14INX14IN", "14INX17IN")
Magnification Type	(2010,0060)	U/M	Always set.
			("REPLICATE", "BILINEAR", "CUBIC", "NONE")
Smoothing Type	(2010,0080)	U/U	If it defines, always set.
Border Density	(2010,0100)	U/U	Always set. ("BLACK", "WHITE")
Empty Image Density	(2010,0110)	U/U	Always set. ("BLACK", "WHITE")
Min Density	(2010,0120)	U/U	0 to 9999
Max Density	(2010,0130)	U/M	0 to 9999
Trim	(2010,0140)	U/U	Always set. ("YES", "NO")
Configuration Information	(2010,0150)	U/M	Always set.
Referenced Film Session Sequence	(2010, 0500)	M/M	Always set.
>Referenced SOP Class UID	(0008,1150)	M/M	Always set.
>Referenced SOP Instance UID	(0008,1155)	M/M	Always set.
Referenced Image Box Sequence	(2010,0510)	-/M	
>Referenced SOP Class UID	(0008,1150)	-/M	
>Referenced SOP Instance UID	(0008,1155)	-/M	

# 8.4 Basic Grayscale Image Box SOP Class

# 8.4.1 N-SET Attributes

Attribute name	Tag	Usage SCU/SCP	Attributes
Image position	(2020, 0010)	M/M	Always set. (1 to 36)
Polarity	(2020, 0020)	U/M	Always set. ("NORMAL", "REVERSE")
Magnification Type	(2010, 0060)	U/U	Always set. ("REPLICATE", "BILINEAR" "CUBIC", "NONE")
Smoothing Type	(2010, 0080)	U/U	If it defines, always set.
Preformatted Grayscale Image Sequence	(2020, 0110)	M/M	Always set.
>Samples Per Pixel	(0028, 0002)	M/M	Always set. (1)
>Photometric Interpretation	(0028, 0004)	M/M	Always set. ("MONOCHROME2")
>Rows	(0028, 0010)	M/M	Always set.
>Columns	(0028, 0011)	M/M	Always set.
>Pixel Aspect Ratio	(0028, 0034)	M/M	Always set. $(1 \setminus 1)$
>Bits Allocated	(0028, 0100)	M/M	Always set. (8)
>Bits Stored	(0028, 0101)	M/M	Always set. (8)
>High Bit	(0028, 0102)	M/M	Always set. (7)
>Pixel Representation	(0028, 0103)	M/M	Always set. (0)
>Pixel Data	(7FE0, 0010)	M/M	Always set.

#### Table 13

## 8.5 **Printer SOP Class**

### 8.5.1 N-GET Attributes

Table 14

Attribute name	Tag	Usage SCU/SCP	Attributes
Printer Status	(2110,0010)	U/M	
Printer Status Info	(2110,0020)	U/M	
Printer Name	(2110,0030)	U/M	